

INTERNAL PADDING GUIDE

This guide illustrates how to configure the internal padding correctly for a selection of popular DJ controllers.



EQUIPMENT

Pioneer DDJ SZ/SZ2/RZ	No Padding
Pioneer XDJ RX	Use Padding A B
Numark NS7 II	Use Padding A B C
Numark NS7 FX	Use Padding A B C
Denon DJ MCX 8000	Use Padding A B